



CARTRIDGE TANK FILTRATION SYSTEM – EDM



Fiberglass Tank



Replaceable Cartridge

CARTRIDGE TANK FILTRATION SYSTEM (CTFS) - EDM

The **BW-CTFS-EDM** is a cartridge in tank DI system utilizing a high capacity mixed bed resin specifically tailored for electrical discharge machining (EDM) applications.

The **BW-CTFS-EDM** cartridges are filled with **RESION 15**, which is a workhorse resin designed to provide the maximum throughput of water at the highest quality. Consisting of a mixture of type 1 strong base anion resin and strong acid cation resin, it is ideal for water with higher alkalinity and high Cationic load.

Conventional DI systems utilize tanks that either have to be sent to a processing facility to be refilled or that the customer has to extract and refill. This can add time, labor, and cost to your operation.

The **BW-CTFS-EDM** utilizes a stationary tank that houses a replaceable EDM Resin cartridge. Cartridges are simple, quick, and easy to change out and can be done without any tools.

Features

- * 100% Non-Metallic
- * 1-1/4" or 2" Inlet/Outlet
- * High Flow / Low Pressure Drop
- * High Capacity for Maximum Throughput
- * No Tools Necessary Design
- * Easy, Simple Cartridge Changes
- * Corrosion Resistant
- * Polyethylene Cartridge
- * Vortech Distributor Plate
- * Temp Rating 33-100°F
- * Pressure Rating 25-100 psi
- * Designed for use in EDM Applications

SOLUTIONS * SERVICE * SUPPORT

Better Water LLC; 698 Swan Dr; Smyrna, TN 37167; Phone (615) 355-6063, Fax (615) 355-6065
Website www.betterwater.com

rev. May 2016



*Equipment changes are at the sole discretion of Better Water LLC.
Brochure photographs and specifications may not reflect recent changes.*



CARTRIDGE TANK FILTRATION SYSTEM – EDM


CHANGING CARTRIDGES IS AS EASY AS 1, 2, 3...




1. Remove LOCK RING



2. Remove LID

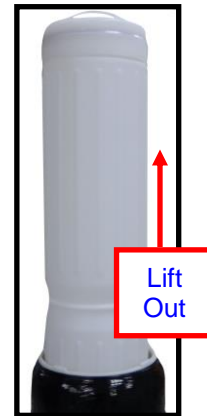

3. Lift CARTRIDGE OUT

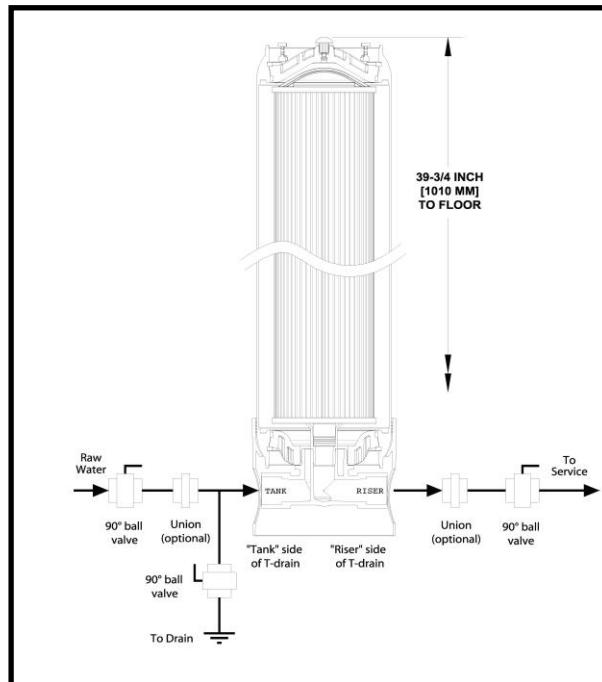

SOLUTIONS * SERVICE * SUPPORT

rev. May 2016

Better Water LLC; 698 Swan Dr; Smyrna, TN 37167; Phone (615) 355-6063, Fax (615) 355-6065
Website www.betterwater.com



Equipment changes are at the sole discretion of Better Water LLC.
Brochure photographs and specifications may not reflect recent changes.

