



CARTRIDGE TANK FILTRATION SYSTEM



Fiberglass Tank



Replaceable Cartridge

CARTRIDGE TANK FILTRATION SYSTEM (CTFS)

Better Water LLC's CTFS is the ideal, cost effective solution for medical applications which use ion exchange resins and carbon filter media that require routine replacement.

Conventional filtration systems utilize tanks that either have to be sent to a processing facility to be refilled or that the customer has to extract and refill. This can add time, labor, and cost to your operation.

The Better Water LLC's CTFS utilizes a stationary fiberglass tank which houses a replaceable cartridge. Cartridges are simple, quick, and easy to change out and can be done without any tools.

Can Be Used With Many Types of Media Such As:

- GAC Carbon
- Softening Resin
- Mixed Bed DI Resin
- Separate Bed DI Resin
- Anion Resin
- Neutralizing Media
- Birm Media
- KDF 55 & KDF 85

Features

- * 100% Non-Metallic
- * 1-1/4" or 2" Inlet/Outlet
- * High Flow / Low Pressure Drop
- * No Tools Necessary Design
- * Easy, Simple Cartridge Changes
- * Corrosion Resistant
- * Polyethylene Cartridge
- * Vortech Distributor Plate
- * Temp Rating 33-100°F
- * Pressure Rating 25-100 psi
- * Down-Flow or Up-Flow Service

Filter Cartridge Configurations:

- Carbon Block 3 & 20 micron
- 20 micron Pleated with Biostat®Pleated
- 10 micron Pre-Pleated / 5 micron Post-Pleated
- 20 micron Pre-Pleated / 10 micron Post-Pleated
- 50 micron Pre-Pleated / 20 micron Post-Pleated

SOLUTIONS * SERVICE * SUPPORT

Better Water LLC; 698 Swan Dr; Smyrna, TN 37167; Phone (615) 355-6063, Fax (615) 355-6065
Website www.betterwater.com

rev. May 2016



*Equipment changes are at the sole discretion of Better Water LLC.
Brochure photographs and specifications may not reflect recent changes.*



CARTRIDGE TANK FILTRATION SYSTEM


CHANGING CARTRIDGES IS AS EASY AS 1, 2, 3...




1. Remove LOCK RING



2. Remove LID

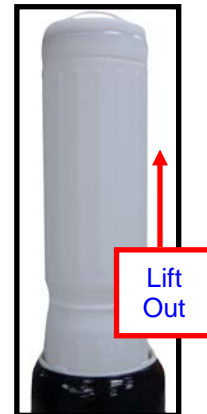

3. Lift CARTRIDGE OUT

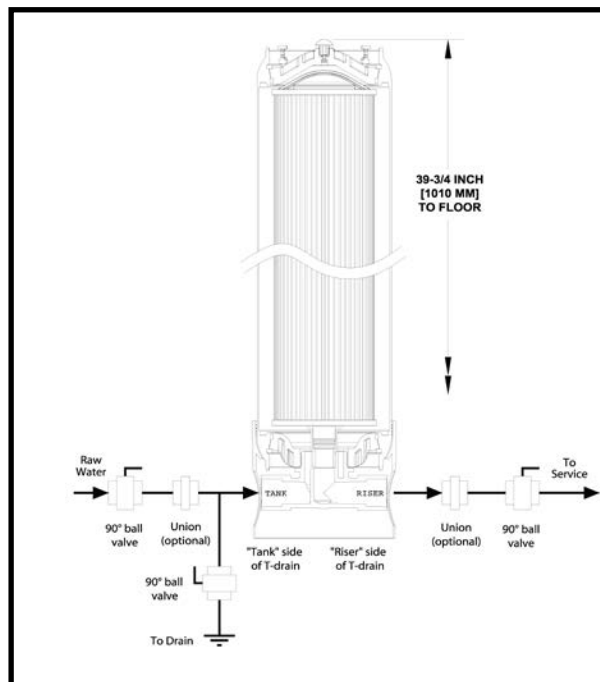

SOLUTIONS * SERVICE * SUPPORT

rev. May 2016

Better Water LLC; 698 Swan Dr; Smyrna, TN 37167; Phone (615) 355-6063, Fax (615) 355-6065
Website www.betterwater.com



Equipment changes are at the sole discretion of Better Water LLC.
Brochure photographs and specifications may not reflect recent changes.

