




Better Water LLC

Water Leak Detector

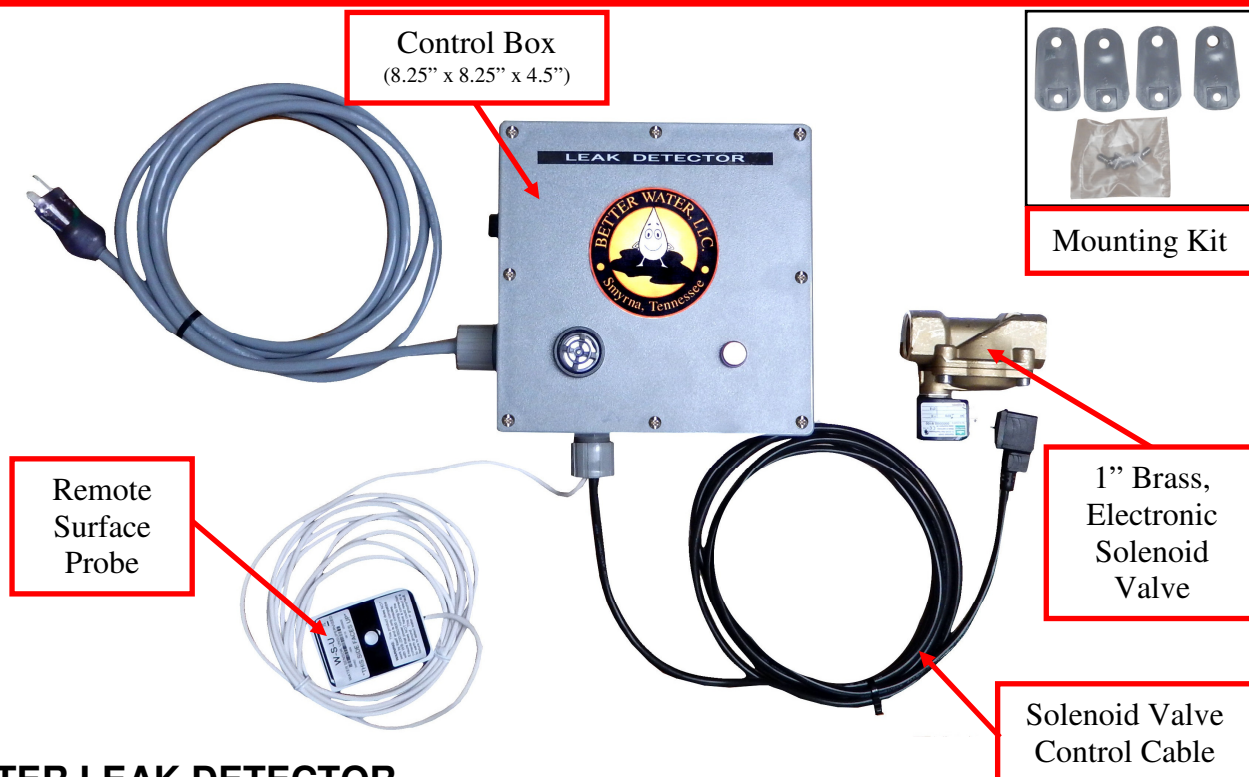

WATER LEAK DETECTOR

- Designed to detect and alarm when a water leak has been detected and shut-off the water supply with an electrically controlled solenoid valve.
- Easily integrated into a variety of applications where leak detection is needed.
- Compact, wall-mount control box containing alarm light and audible piezo.
- Remote surface probe with 9 foot control wire
- 1" brass solenoid valve with 9 foot control cable which will automatically close when a water leak is detected.
- Detects tap water only (*distilled or deionized water cannot be detected*).



Better Water LLC; 698 Swan Dr; Smyrna, TN 37167; Phone (615) 355-6063, Fax (615) 355-6065
Website www.betterwater.com

rev. Jul 2015



Equipment changes are at the sole discretion of Better Water LLC.
Brochure photographs and specifications may not reflect recent changes.